How to upload Firmware update on RF11iQP

Open browser window (Firefox, Chrome, Safari etc) and type in IP address of RF11iQP. For example <u>http://192.168.2.128:8081</u>



The RF11iQP login page will show...

| Log into 192.168.12.128:8081 | | | |
|-------------------------------------|----------|-------|--|
| Your password will be sent unencryp | sted. | | |
| Username | | - | |
| Remember this password | | _ | |
| | Cancel L | an In | |

User: admin Password: THORRF11 (default login credentials). If you have changed the Login credentials please type in your saved username and password.

| Your password will be sent unencrypted. | | | |
|---|--------|--------|------|
| admin | | | |
| Remember this password | | | |
| | Cancel | Log in | g in |

RF11iQP Homepage will be presented...

| HQS | RF11IQP |
|---|--|
| T11Q DASHBOARD | |
| Image: Constraint of the second sec | (() 4 BLANK (1 1 1 LED |
| : 192.168.2.128 ESTART Φ2021 Thor Technologies Pty Ltd – This site is for RP11q product users only and is a product of Thor | Serial Number: 8C48141F1480 Version: 215-20220628 Uptime: 149 02:20:23 Tehnologies. |

Note: Firmware version under Serial Number/MAC Address bottom R/H/S of screen



Select "CONFIGURE" to open configuration page



Find the "Firmware" section in Configuration page.

| Image: Section 1 Image: Section 1 Image: Section 1 Image: Section 1 | - 0 × - 0 × | |
|--|--|--|
| THUR | RF11IQP | |
| RF11IQ CONFIGURATION | Save Cancel | |
| TCP/IP IN NALL CACE IR # ADDESS IC.20.11 GATEWAY IC.20.11 GATEWAY IC.20.11 BARKET HAME IC.20.10 MARKET HAME </td <td>EMAIL OMAL SERVER OMAL SERVER S OMAT DMAL SERVER S S MORE EMAIL ADDRES Test</td> <td></td> | EMAIL OMAL SERVER OMAL SERVER S OMAT DMAL SERVER S S MORE EMAIL ADDRES Test | |
| DELAYS OKANG IN SECOND ATTER OFFICE SET ED 61 DORADE ANTO- RESTAR ATTER OFFICE RESTAR ATTER OFFICE ATTER O | NETWORK ACCESS NOT NAKE BETIOP Addie Mic Access Jass Bankers FIRMWARE UPONT FIRMWARE Upload Click 'Upload' NEW FIRMWARE FIRMWARE | 4 Select : 'Choose File' and locate the latest firmware file that was downloaded to your PC/ Server |
| Once New Firmware is uploaded the GUI will | Il disconnect and it is a | dvised that you reconnect as per step 2: |

Once New Firmware is uploaded the GUI will disconnect and it is advised that you reconnect as per step 2: '2:CONNECT TO THE RF11IQP USING YOUR BROWSER' and check the GUI shows the updated Firmware as shown in 'Figure 1 GUI RF11iQP'. Do not rely the auto reconnected browser ... ALWAYS RECONNECT

In Firmware section select "Choose File". Go to where the downloaded updated firmware file has been placed in your computer files. (refer section downloaded firmware file from RF11iQP Product page on <u>www.thortechnologies.com.au</u>) download firmware file and upload.

Note: If the firmware update process encounters an error the last known firmware version will be rollbacked onto the device.

Check the firmware has been updated on Homepage where firmware version is shown..



All done.